

Butterick®

FREE PROJECT

Sewing Machine ORGANIZER



SUGGESTED FABRICS:

Fat Quarters or Cotton, Cotton blends, Calico

YOU WILL NEED:

Upper and Lower Front & Back:

Two Fat Quarters ea. 18" x 22" (46cm x 56cm)

Pocket:

One Fat Quarter 18" x 22" (46cm x 56cm)

or **FABRIC REMNANTS**

to match cutting dimensions listed below:

Upper Front & Back:

Cut 2 fabric & 1 interfacing 16 $\frac{3}{4}$ " x 22"

Lower Front & Back:

Cut 2 fabric & 1 interfacing 16 $\frac{3}{4}$ " x 4 $\frac{1}{2}$ "

Pocket:

Cut 1 fabric & 1 interfacing 16 $\frac{3}{4}$ " x 3 $\frac{1}{4}$ "

NOTIONS:

2 $\frac{1}{2}$ yds. of single fold Bias Tape

Fusible Interfacing-22" wide, 1 $\frac{1}{2}$ yds.

GENERAL INSTRUCTIONS:


Please read all the instructions before you start your project.

Pin pattern pieces to corresponding fabric sections.


All seam allowances are $\frac{1}{2}$ " (13mm) unless otherwise indicated

Sewing Machine ORGANIZER

1. Fuse one of INTERFACING to wrong side of each corresponding FABRIC section following manufacturer's instructions.

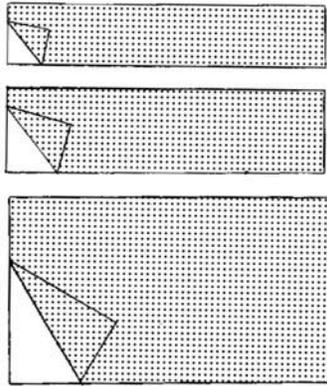


2. Open out one edge of bias tape. Press.

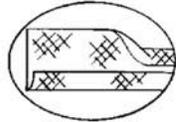

3. Pin this edge to upper edge of POCKET, right sides together, having raw edges even. Stitch along crease of tape.




4. Turn tape to inside. Press.

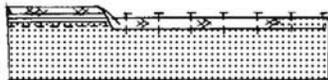


5. On outside, EDGESTITCH inner edge of tape in place, catching all layers.




6. Pin UPPER FRONT AND BACK sections, wrong sides together. Baste raw edges together.

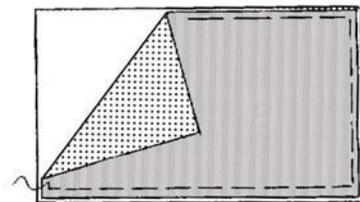


7. Pin LOWER FRONT to upper front, right sides together; pin remaining LOWER BACK to upper back, right sides together. Stitch.

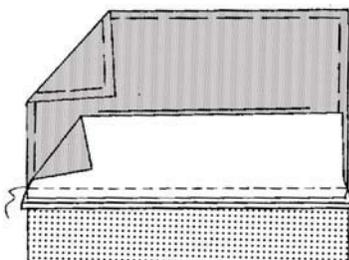


8. Turn lower front and back to outside, encasing seam. Press. Baste raw edges together.

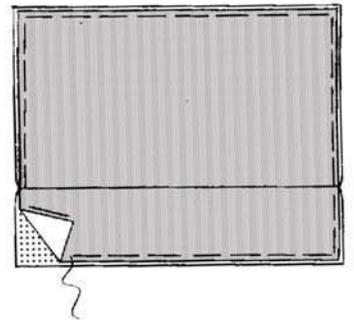


9. With right sides up, pin pocket to lower front. Divide pocket into thirds and stitch vertical pocket divisions. Baste raw edges together.

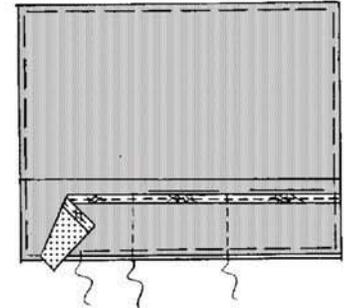


10. Open out one edge of bias tape. Press.

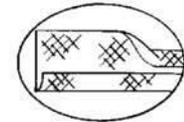

11. With right sides together, pin this edge to outer edge of organizer, having raw edges even, folding in fullness at corners, and turning under one end and lapping over the other at upper edge. Stitch along crease of tape.

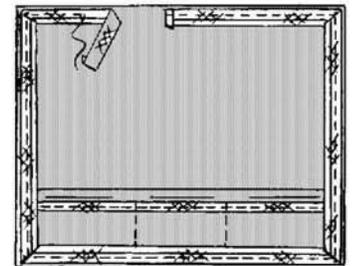

12. Turn tape to inside, folding miters at corners. Press.

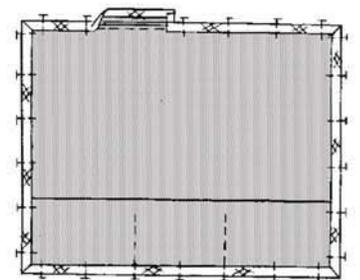

13. On outside, EDGESTITCH inner edge of tape in place, catching all layers.

